

# Replacement Sheet

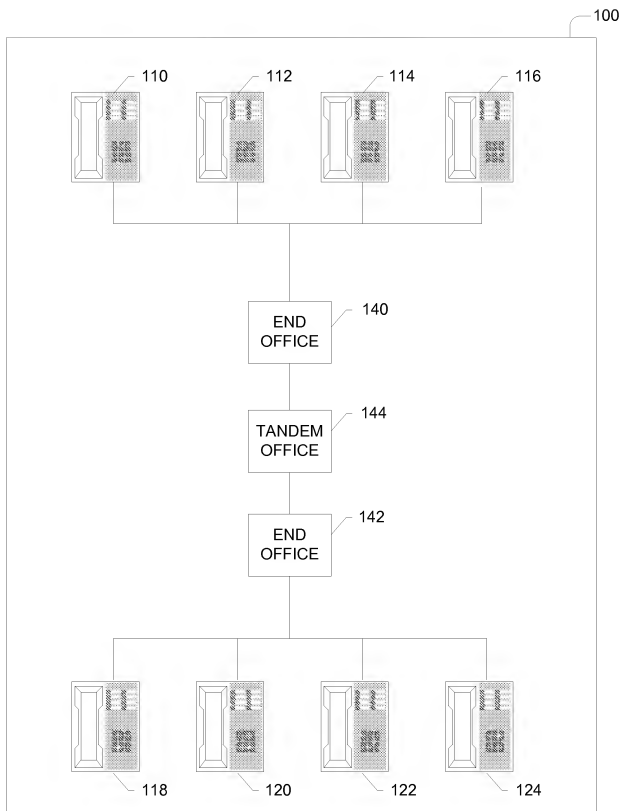


FIGURE 1

## CLASS OF SERVICE TABLE

220	4453	404-555-4453	240
	4454	404-555-4454	
	4455	404-555-4455	
	4456	404-555-4456	

FIGURE 2

# Replacement Sheet

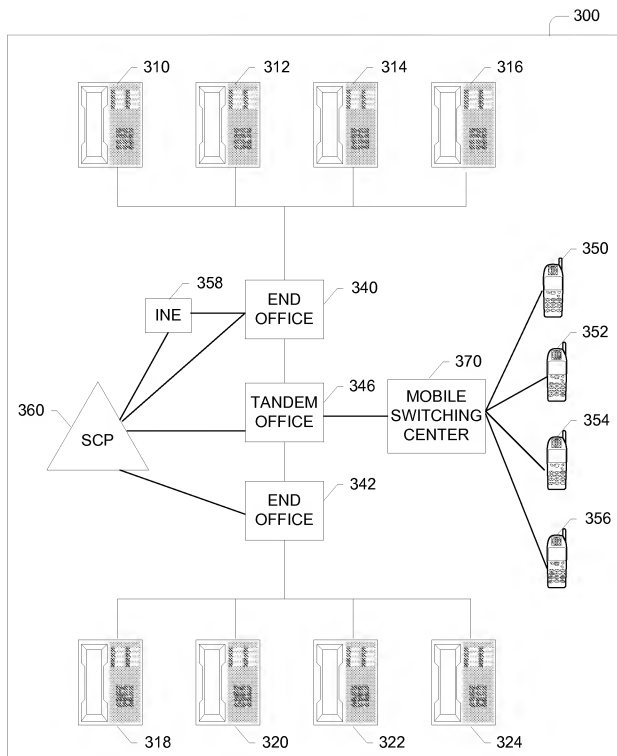


FIGURE 3

# Replacement Sheet

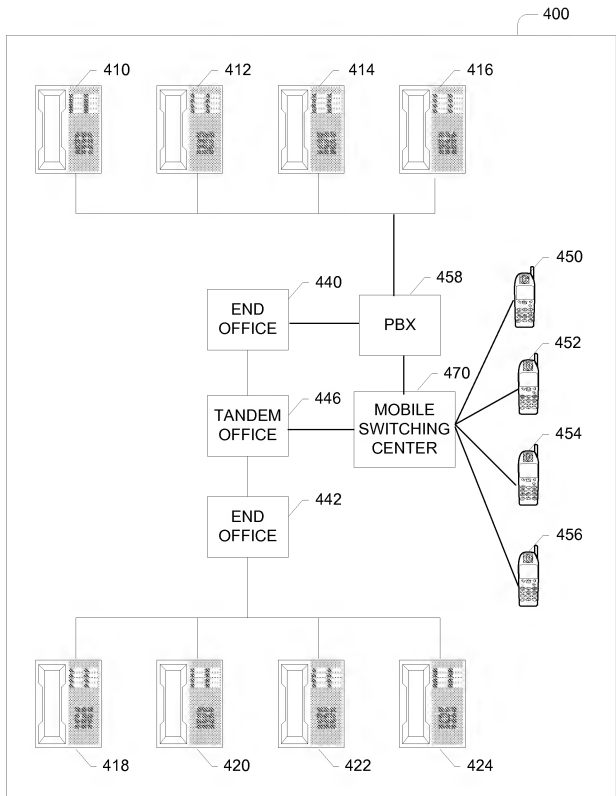


FIGURE 4

# Replacement Sheet

The diagram shows a table titled "CLASS OF SERVICE TABLE" with three columns: "Reference No.", "EXTENSION", and "NPA-NXX-XXXX". The table is divided into two main sections. The first section, indicated by bracket 508, contains reference numbers 310 through 324, all with extension 4310-4324 and NPA-NXX-XXXX 404-555. The second section, indicated by bracket 510, contains reference numbers 350 through 356, with extensions 4326-4332 and NPA-NXX-XXXX 678-234. A bracket 506 groups the extension and NPA-NXX-XXXX columns. A bracket 502 groups the Reference No. column. A bracket 504 points to the title. A bracket 500 points to the entire table structure.

Reference No.	EXTENSION	NPA-NXX-XXXX
310	4310	404-555-4310
312	4312	404-555-4312
314	4314	404-555-4314
316	4316	404-555-4316
318	4318	404-555-4318
320	4320	404-555-4320
322	4322	404-555-4322
324	4324	404-555-4324
350	4326	678-234-0337
352	4328	678-234-0339
354	4330	678-234-0341
356	4332	678-234-0343

FIGURE 5

## EXEMPLARY CALLS WITHIN CENTREX NETWORK

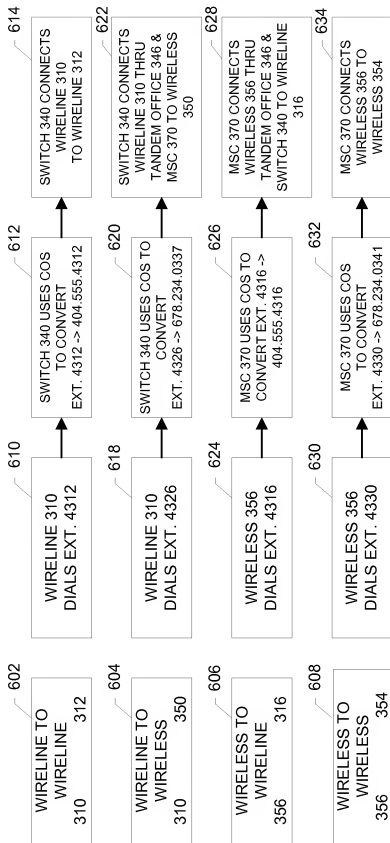


FIGURE 6